




APPLY HP-250 PRIMER TO THE FLASHING AND ONTO THE DECK MEMBRANE WHERE THE PRESSURE-SENSITIVE OUTSIDE CORNER IS TO BE INSTALLED.

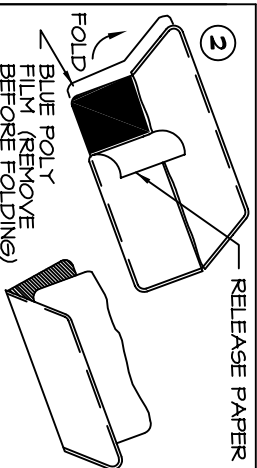


PRIOR TO PLACEMENT OF SURE-SEAL CORNER, PEEL OFF THE BLUE POLY FILM AND HEAT THE FLASHING SIDE WITH A HEAT GUN. RE-APPLY THE POLY LOOSELY. FOLD THE FLASHING IN HALF AND PEEL OFF ONE SIDE OF THE RELEASE PAPER.

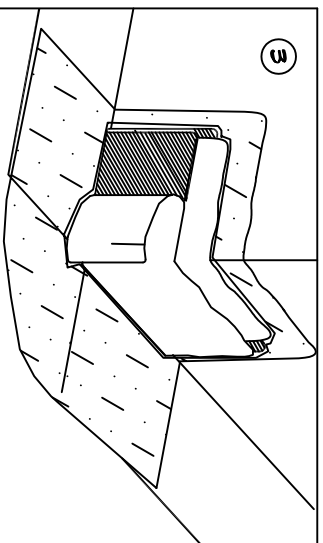


PLACE SURE-SEAL INSIDE/OUTSIDE CORNER AS SHOWN AND REMOVE RELEASE PAPER.

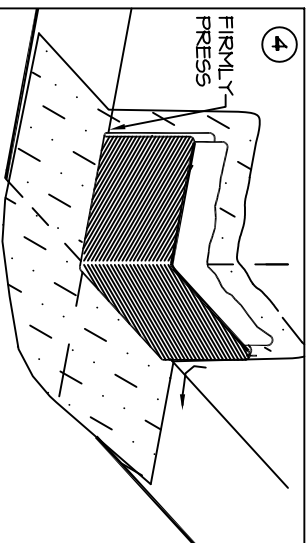


PRESS FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING AGAINST THE VERTICAL SURFACE.

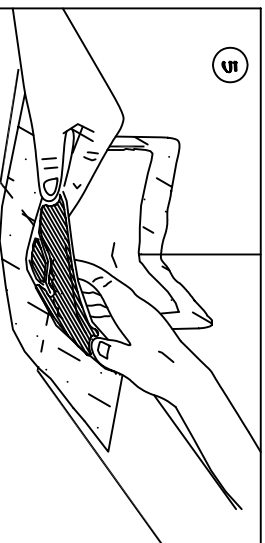

PLACE FOLDED FLASHING TIGHTLY INTO ANGLE CHANGE AND FIRMLY PRESS FLASHING ONTO THE DECK FLANGE BY PRESSING THE FLASHING AGAINST THE HORIZONTAL SURFACE.

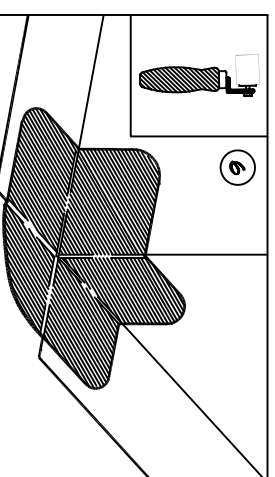

PLACE QUARTER SECTION ONTO DECK WITH LONG FOLDED SIDE FACING THE WALL. REMOVE REMAINING RELEASE PAPER. PRESS FIRMLY AND PROCEED WITH SECOND QUARTER GOING UP THE VERTICAL WALL BY PRESSING FIRMLY INTO CORNER.

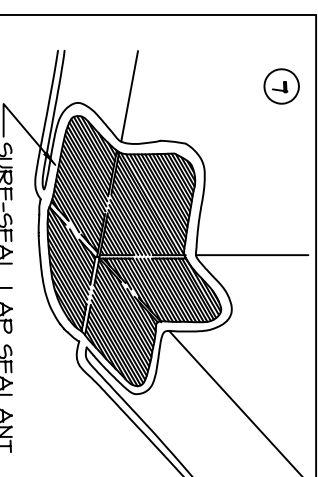

SEAL ALL EXPOSED EDGES WITH SURE-SEAL LAP SEALANT.

# FB-15-G SURE-SEAL<sup>®</sup> PRESSURE-SENSITIVE OUTSIDE CORNER

**CARLISLE**  
Carlisle Syntec Incorporated