




① PLAN VIEW OF SHEET LAYOUT

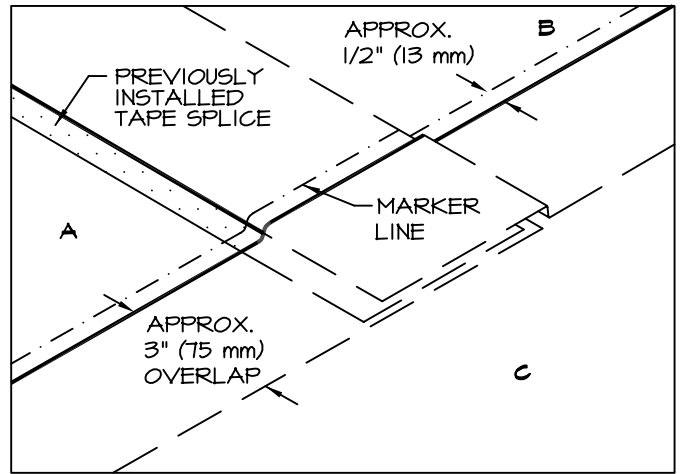


② POSITION SHEET OVER THE PREVIOUSLY SPLICED SHEETS (A & B) TO ALLOW APPROXIMATELY A 3" (75 mm) OVERLAP. MARK THE BOTTOM SHEETS WITH AN INDELIBLE MARKER APPROXIMATELY 1/4" (6 mm) FROM THE TOP EDGE.

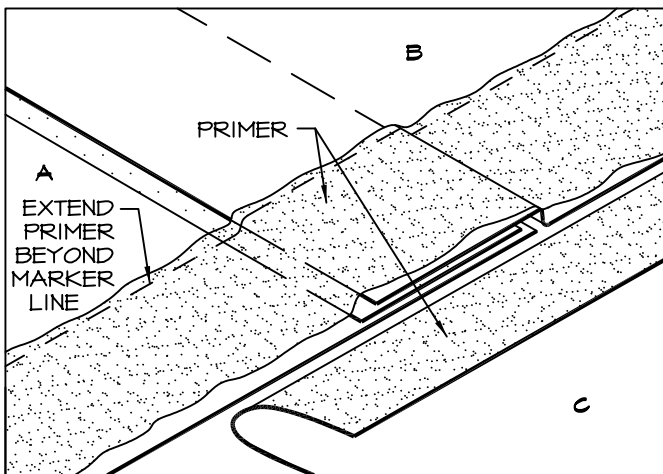


③ FOLD SHEET C BACK AS SHOWN. ROLLER APPLY THE PRIMER TO THE SPLICE AREA ON BOTH SURFACES AND ALLOW TO DRY PROPERLY.

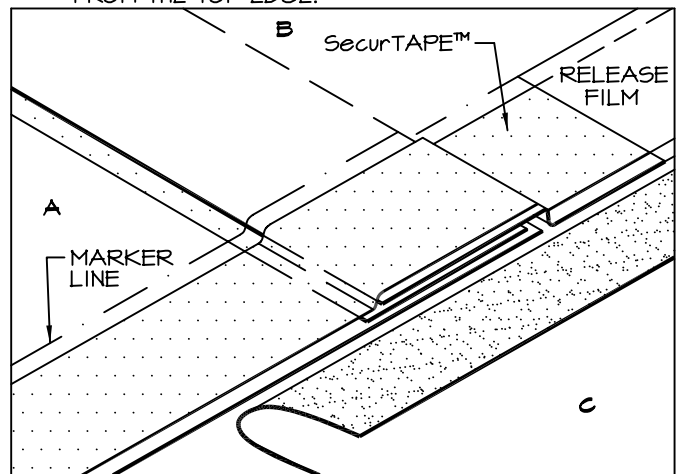

④ ALIGN RELEASE FILM WITH MARKER LINE. TAPE MUST EXTEND 1/8" TO 1/2" (3 mm to 13 mm) BEYOND SPLICE EDGE.

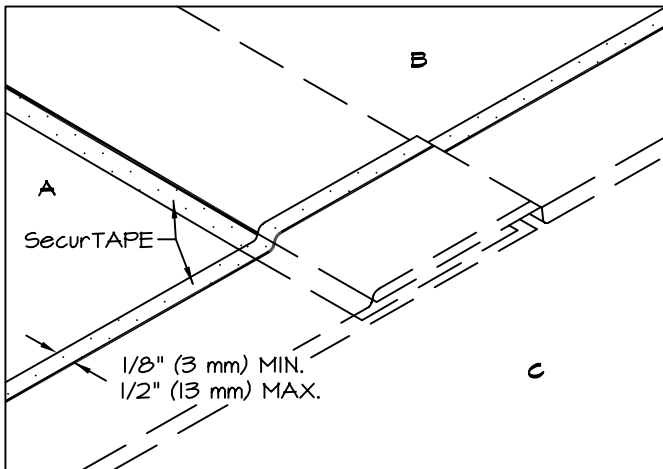

⑤ SPLICE SHEET C TO SHEETS A AND B. PRESS TOP SHEET ONTO BOTTOM SHEETS USING HAND PRESSURE TOWARD THE OUTER EDGE OF THE SPLICE AND ROLL WITH A STEEL ROLLER.

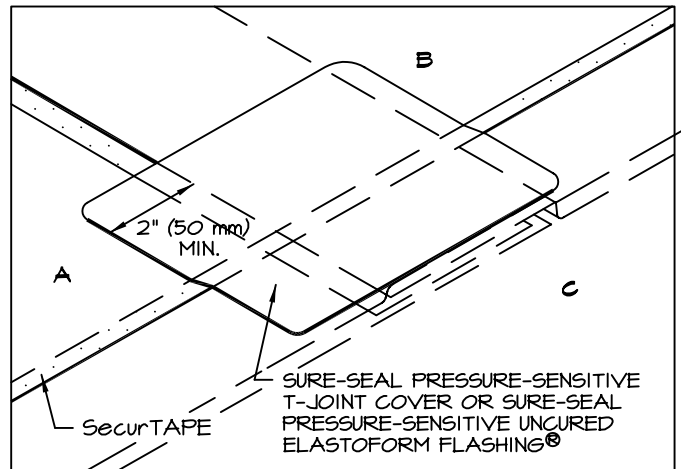

⑥ AT SPLICE INTERSECTIONS, APPLY PRIMER AND INSTALL A PRESSURE-SENSITIVE "T" JOINT COVER OR 6" (150 mm) WIDE SECTION OF PRESSURE-SENSITIVE UNCURED ELASTOFORM FLASHING (WITH ROUNDED CORNERS) OVER THE MEMBRANE EDGE AS SHOWN.

FB-2-C

SPLICE TAPE INTERSECTION AT CAP SHEET

CARLISLE
Carlisle SynTec Incorporated