



MEMBRANE THICKNESS IS DEPENDENT UPON WARRANTY LENGTH. REFER TO "DESIGN GUIDELINES" IN THE SPECIFICATION FOR SPECIFIC REQUIREMENTS

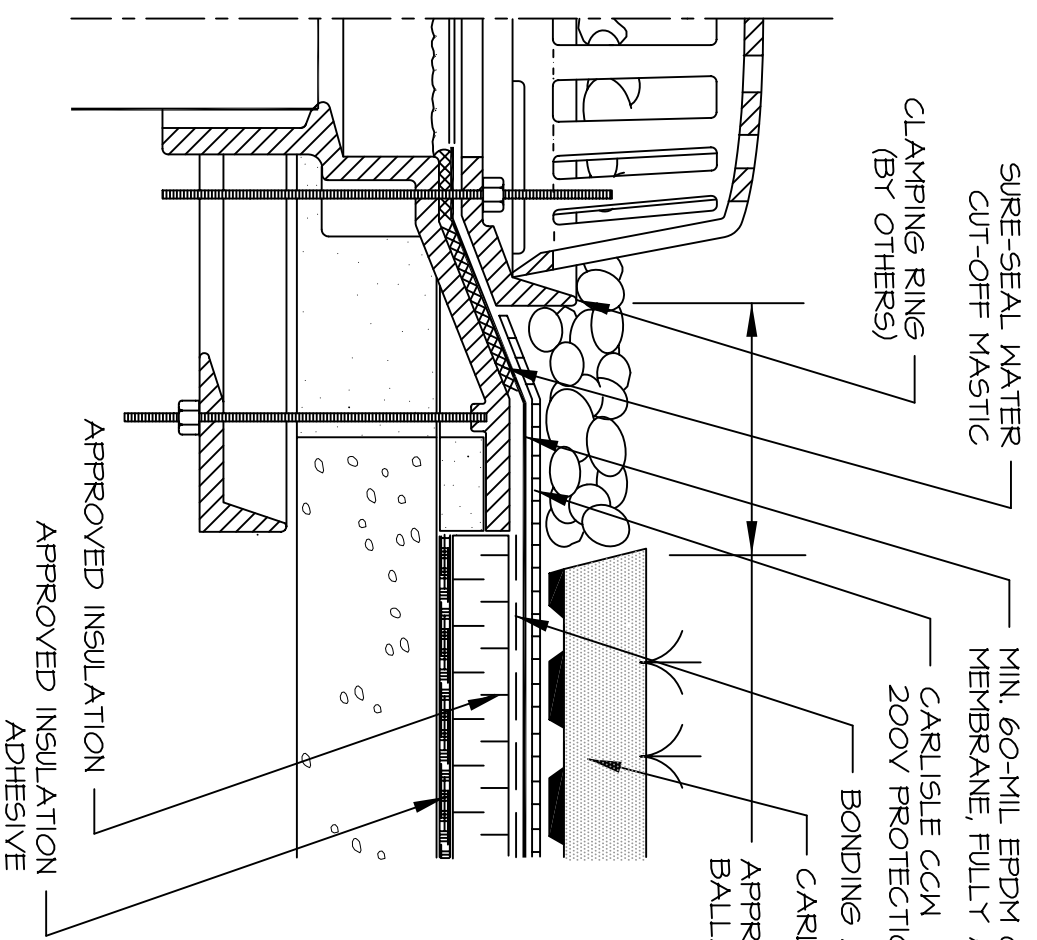

NOTES:

1. STOP CCM 200V PROTECTION FABRIC MAT AT BASE OF DRAIN.
2. REMOVE ALL LEAD AND OTHER FLASHING.
3. ALL BOLTS OR CLAMPS MUST BE IN PLACE TO PROVIDE CONSTANT COMPRESSION ON WATER CUT-OFF MASTIC.
4. CUT THE MEMBRANE SO IT EXTENDS A MINIMUM OF 1/2 INCH (13 mm) FROM THE ATTACHMENT POINTS OF THE DRAIN CLAMPING RING.
5. HOLE IN MEMBRANE MUST EXCEED SIZE OF DRAIN PIPE.
6. ROOF DRAIN SIZE AND NUMBER OF DRAINS SHALL BE IN ACCORDANCE WITH LOCAL CODES.

 <p style="font-size: 24pt; font-weight: bold;">GreenGrid®</p> <p style="font-size: 24pt; font-weight: bold;">ROOF DRAIN</p>	 <p style="font-size: 12pt; font-weight: bold;">Carlisle Syntec Incorporated</p>
---	---