


CONTINUOUS 90 MIL EPDM MEMBRANE USED TO FLASH ENTIRE CURB AS SHOWN

APPLY LAP SEALANT TO CURB FLASHING FLANGES AS SHOWN (NOTE 3)

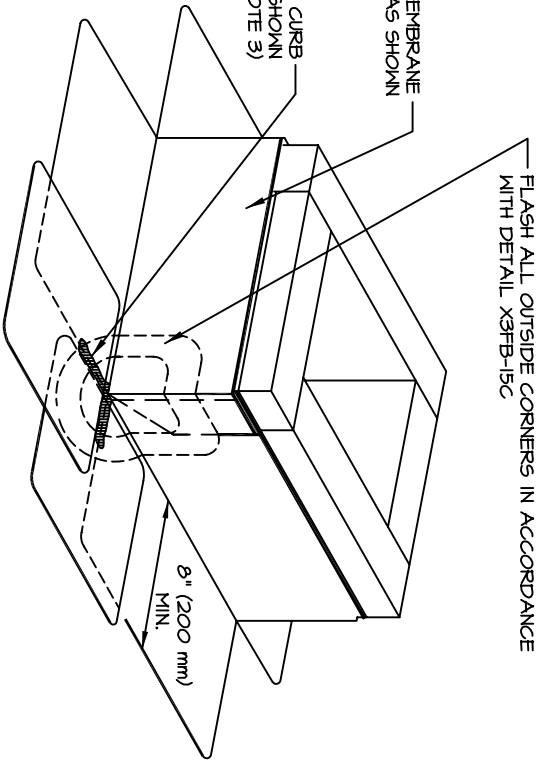

LAP SEALANT IS REQUIRED ON ALL EXPOSED FLASHING EDGES

- NOTES:
1. IF VERTICAL SPLICE IS **NOT** LOCATED AT CORNER, A **4.5" x 6"** (115 x 150 mm) AND A **9" x 12"** (230 x 300 mm) PIECE OF PRESSURE-SENSITIVE ELASTOFORM FLASHING MUST BE CENTERED OVER FIELD SPLICE AT ANGLE CHANGE.
 2. APPLY PRIMER PRIOR TO INSTALLING SECURTAPE.
 3. APPLY LAP SEALANT ALONG THE EDGES OF THE CURB FLASHING FLANGES EXTENDING 2" (50 mm) MINIMUM FROM THE CORNER OF THE CURB.

30-YEAR WARRANTY

X3FB-5

CURB FLASHING



© 2007 CARLISLE SYNTec INCORPORATED